



INSTALLATION AND TECHNICAL INFORMATION

CYLINDER SERIES CY

PLEASE READ AND FOLLOW ALL SAFETY INSTRUCTIONS

SAVE THIS SHEET

TO AVOID RISK OF ELECTRIC SHOCK AND INJURY

- Never attempt any work on the luminaire unless it is disconnected from the power source.
- Any Installation and service of the luminaire should be done by a certified electrician.
- Confirm the supply voltage matches the voltage labeled on the luminaire.
- Make sure all electrical and grounded connections are in accordance with the National Electric Code (NEC) and any local codes.
- Make sure all connections are capped with UL-listed wire connectors.
- Allow luminaire to cool down before handling. Never handle luminaire when it is in use.
- Do not exceed the maximum wattage labeled on luminaire.
- Always wear gloves and safety glasses when installing, handling, or performing routine maintenance on the luminaire.
- Do not look directly at the light source when luminaire is on.

TO AVOID RISK OF FIRE AND PRODUCT DAMAGE

- Keep any combustible material away from the luminaire.
- Do not operate luminaire near any persons, materials, or substances that are sensitive to heat.
- When mounting, make sure wiring is secured from any edges or objects that can damage the wire insulation.
- Do not obstruct ventilation of the luminaire. Do not cover the luminaire with foam or other insulation material that will restrict convection or conduction cooling.
- Only use luminaire at its intended location.
- LED fixtures are sensitive to polarity. Make sure to identify proper polarity before installing.
- Electrostatic Discharge (or ESD) can damage LED luminaire. Make sure to always wear personal grounding equipment when installing or servicing the luminaire.
- Avoid touching individual electrical components, which can cause ESD and will reduce the life and performance of the luminaire.
- Do not power luminaire on and off frequently as this will greatly reduce luminaire's lifespan.
- Always read the luminaire's complete installation instruction sheet before installing luminaire.
- Always inspect the luminaire for damage. DO NOT INSTALL fixture if there is any damage. Contact your distributor or representative where you purchased the luminaire for warranty claim if luminaire is damaged.

TO MAINTAIN LUMINAIRE AND ENSURE CONSISTENT PERFORMANCE

- **IMPORTANT: Always make sure luminaire is disconnected from power source when performing routine maintenance.**
- Occasionally clean luminaire lens. When cleaning lens, you may dust with soft, dry and clean cloth. You may also use solution of warm water and non-abrasive cleaning agent then wipe with dry cloth. DO NOT USE alkaline or acid cleaners.
- Keep heatsink clear of dust or debris from time to time.
- Maintaining the luminaire on a routine basis is highly recommended.

FAILURE TO FOLLOW ANY OF THESE INSTRUCTIONS MAY VOID WARRANTY.

Please visit www.allureltg.com to view complete product Terms and Conditions.

ALLURE Architectural assumes no responsibility for claims arising from improper or careless installation or handling of its products.

IMPORTANT SAFETY INSTRUCTIONS

1. Make sure power is turned OFF before installing.
2. Inspect fixture for any damages. If damaged, DO NOT install fixture and contact local ALS distributor immediately.

INSTALLATION INSTRUCTIONS


IMPORTANT

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.

WIRING


LUMINAIRE	
LINE	LINE-BLACK
GREEN	GROUND-GREEN
NEUTRAL	NEUTRAL-WHITE
DIM (+) VIOLET	VIOLET
DIM (-) PINK	PINK

STRUCTURE OF LAMP

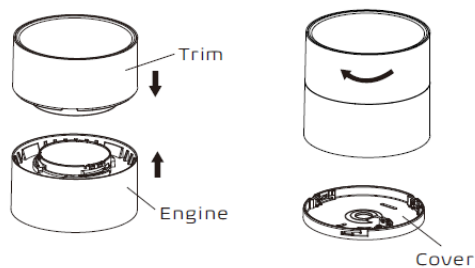

When trim and engine are separated, attached together, and secure them with clockwise direction.


INSTALLATION

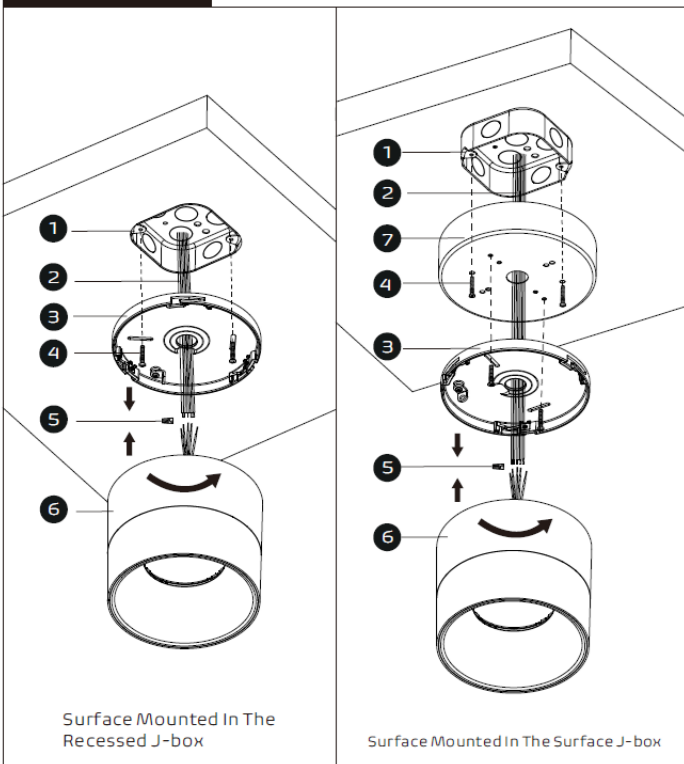


4" /6" /8" Cove



Screw KM4*22

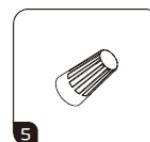

Wire Nut

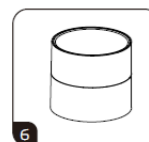

4" /6" /8" Lamp





6" Canopy Power Feed


PARTS

- 1 4" Octagon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 4" /6" /8" Cove
- 4 Screw KM4*22
- 5 Wire Nut
- 6 4" /6" /8" Lamp
- 7 6" Canopy Power Feed

4" Pendant With Cable

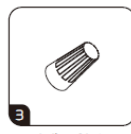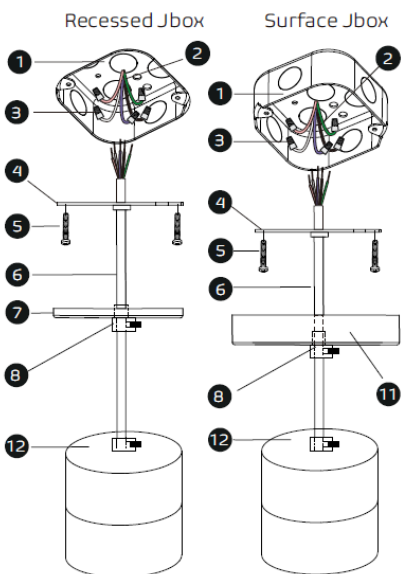


Wire Nut

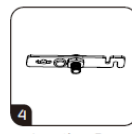


Junction Box Crossbar




Screw PM4*22

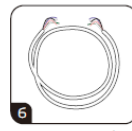

Power Cord

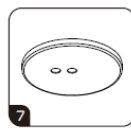


4" Canopy Power Feed

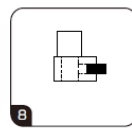


Cable Clip




Cable Holder

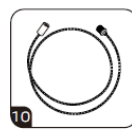


Aircraft Cable

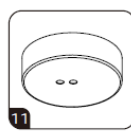

6" Canopy Power Feed

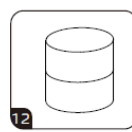


4" / 6" / 8" Lamp

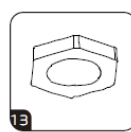

screw nut



6" And 8" Pendant With Cable

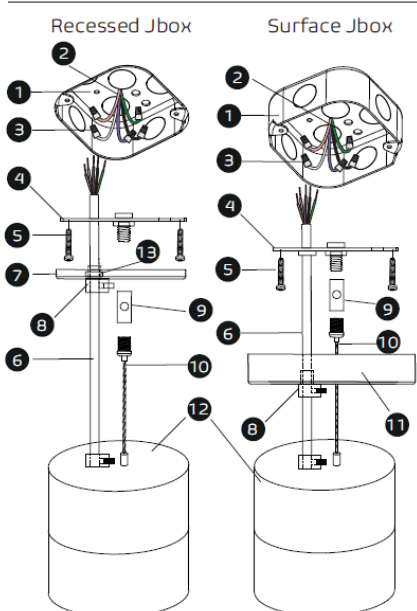


PARTS

- 1 4" Octogon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 Wire Nut
- 4 Junction Box Crossbar
- 5 Screw PM4*22
- 6 Power Cord
- 7 4" Canopy Power Feed
- 8 Cable Clip
- 9 Cable Holder
- 10 Aircraft Cable
- 11 6" Canopy Power Feed
- 12 4" / 6" / 8" Lamp
- 13 Screw nut

Pendant With Stem

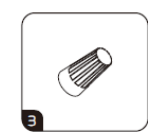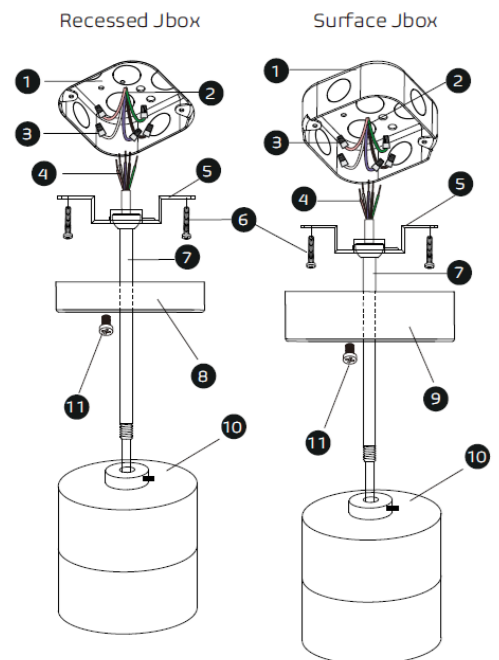


Wire Nut

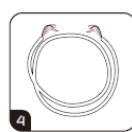

Power Cord




Junction Box Crossbar

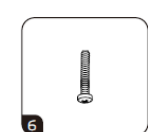

Screw PM4*22



Stem Kits

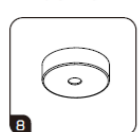


4" Stem Canopy Kits



6" Stem Canopy Kits



4" / 6" / 8" Lamp

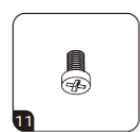

Screw PM3*5

PARTS

- 1 4" Octogon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 Wire Nut
- 4 Power Cord
- 5 Junction Box Crossbar
- 6 Screw PM4*22
- 7 Stem Kits
- 8 4" Stem Canopy Kits
- 9 6" Stem Canopy Kits
- 10 4" / 6" / 8" Lamp
- 11 Screw PM3*5