


UP/DOWN PENDANT LED

ARCHITECTURAL LED LINEAR LUMINAIRE
INSTALLATION INSTRUCTIONS



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

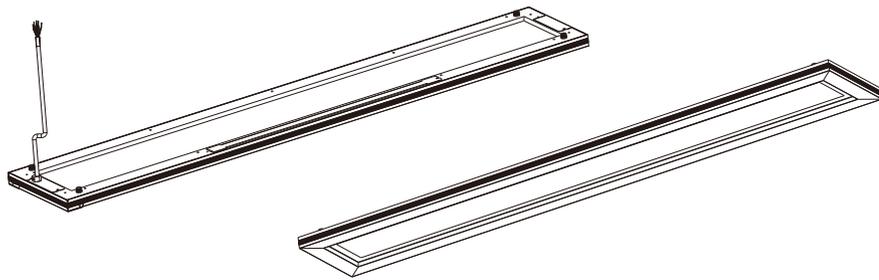

IMPORTANT


1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Under no circumstances can the lighting fixture be covered with heat insulation gasket or similar materials.
8. Seamless continue runs per power feed:
 - 40W: Up to 10pcs in 120V AC, 20pcs in 230V AC and 25pcs in 277V AC
 - 54W: Up to 8pcs in 120V AC, 15pcs in 230V AC and 18pcs in 277V AC
 - 80W: Up to 5pcs in 120V AC, 10pcs in 230V AC and 12pcs in 277V AC

ATTENTION




SHOCK HAZARD!

May result in serious injury or death. Turn power OFF at circuit breaker prior to installation or servicing.

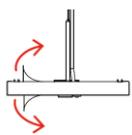

Once final building cleanup has been completed, remove remaining lens protective film.

WIRING

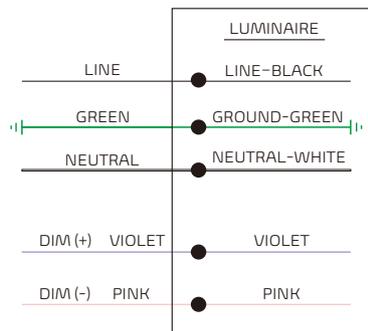


DRY CEILING PENDANT LED

ARCHITECTURAL LED LINEAR LUMINAIRE
INSTALLATION INSTRUCTIONS




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

POWER FEED

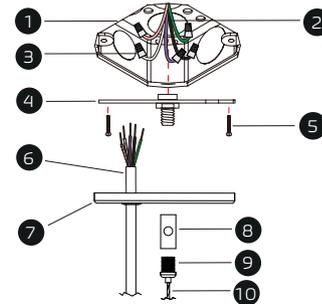


NON POWER SUSPENSION

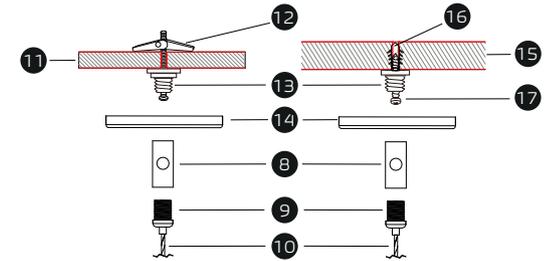


PARTS LIST


- 1 4" Octagon Junction Box (By Others)
- 2 Power Cord (By Others)
- 3 Wire Nut
- 4 Junction Box Crossbar
- 5 Screw PM4*22
- 6 Power Cord
- 7 4" Power Canopy Kit
- 8 Cable Holder
- 9 Strain Relief Thread Nut
- 10 Aircraft Cable
- 11 Drywall Ceiling (By Others)
- 12 Butterfly Drywall Anchor
- 13 Crimp Stud
- 14 2" Canopy
- 15 Solid Ceiling (By Others)
- 16 Anchor
- 17 Screw PA4*30

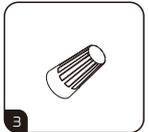

Wire Nut

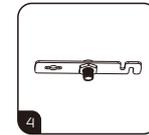


Junction Box Crossbar

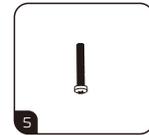


Screw PM4*22



Power Cord

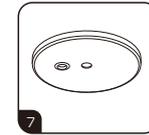


4" Canopy Power Feed

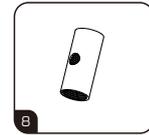


Cable Holder



Strain Relief Thread Nut

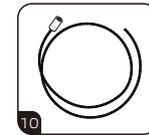


Aircraft Cable

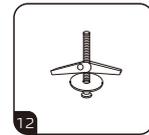


Butterfly Drywall Anchor



Crimp Stud

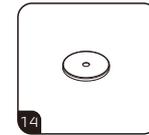

2" Canopy

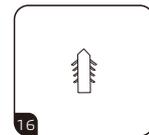

Anchor



Screw PA4*30


DROP CEILING PENDANT LED

ARCHITECTURAL LED LINEAR LUMINAIRE
INSTALLATION INSTRUCTIONS



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



POWER FEED

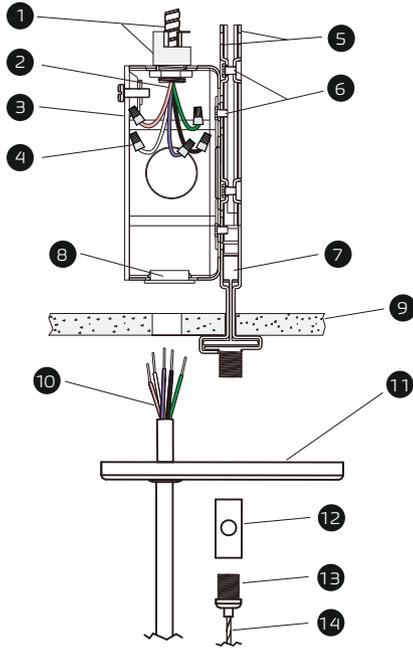

PARTS LIST

- 1 Armored Cable & Connector (By Others)
- 2 Power Cord (By Others)
- 3 4" Octagon Junction Box
- 4 Wire Nut
- 5 Assembled T-grid Clips
- 6 Screw 6#*4
- 7 T-grid (By Others)
- 8 Plastic Grommet
- 9 Ceiling Tile (By Others)
- 10 Power Cord
- 11 4" Canopy Power Feed
- 12 Cable Holder
- 13 Strain Relief Thread Nut
- 14 Aircraft Cable
- 15 2" Canopy

NON POWER SUSPENSION

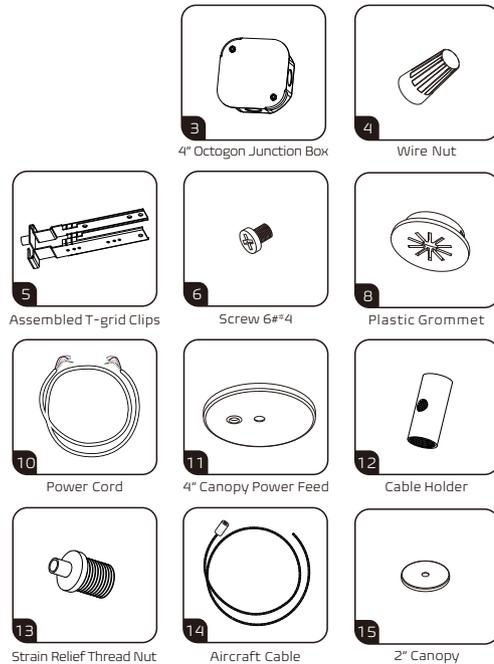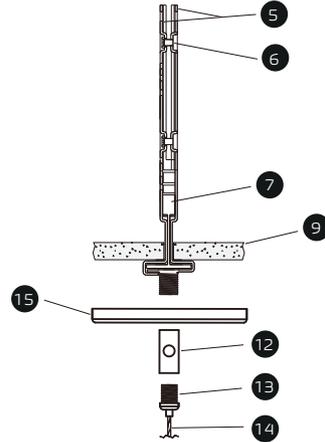


INDEPENDENT PENDANT LED

ARCHITECTURAL LED LINEAR LUMINAIRE
INSTALLATION INSTRUCTIONS





RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

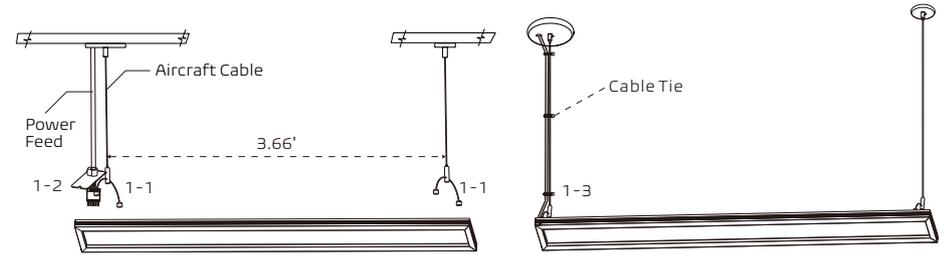

- 1-1: Screw aircraft cables clockwise on the top of luminaire.
- 1-2: Connect the quick connectors properly.
- 1-3: Zip tight power cord & aircraft suspension cable with the cable tie if needed.




Adjust the height of luminaire. Luminaire can be raised by pulling cable through the gripper and can be lowered by depressing the top cylinder on the gripper which pulls the luminaire down.

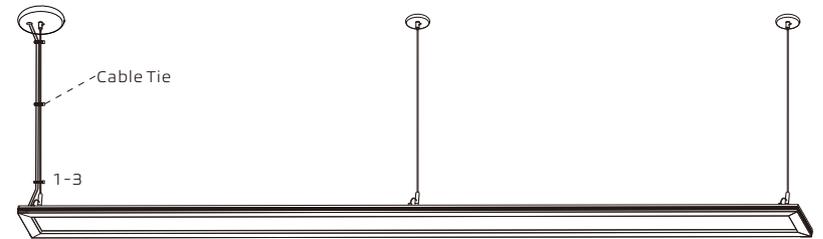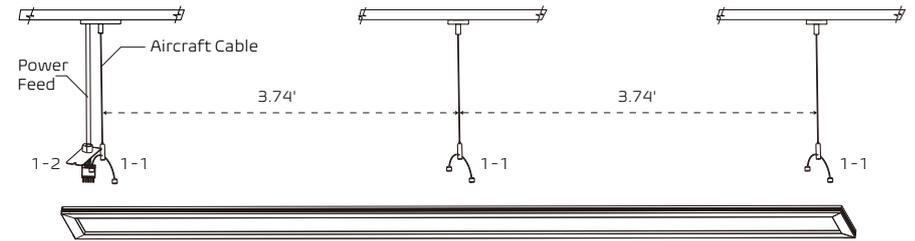



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

► **4' UP/DOWN LUMINAIRE**

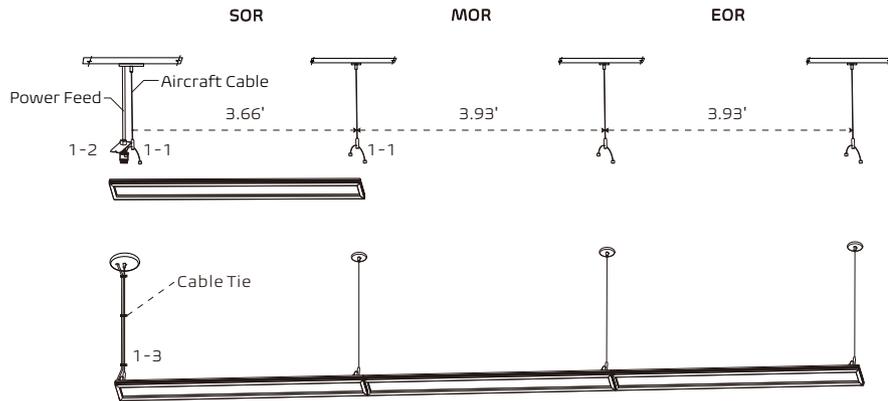

Hang Luminaires


- 1-1: Screw aircraft cables clockwise on the top of luminaires.
- 1-2: Connect the quick connectors properly.
- 1-3: Zip tight power cord & aircraft suspension cable with the cable tie if needed.

⚠ Adjust the height of luminaire. Luminaire can be raised by pulling cable through the gripper and can be lowered by depressing the top cylinder on the gripper which pulls the luminaire down.


Seamless Continue Runs Per Power Feed

- 40W: Up to 10pcs in 120V AC, 20pcs in 230V AC and 25pcs in 277V AC
- 54W: Up to 8pcs in 120V AC, 15pcs in 230V AC and 18pcs in 277V AC
- 80W: Up to 5pcs in 120V AC, 10pcs in 230V AC and 12pcs in 277V AC


Joint Steps

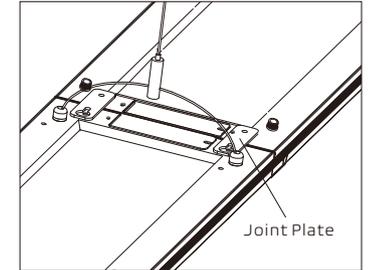

① Joint two luminaires together by mounting the Joint plate on the both sides as shown.

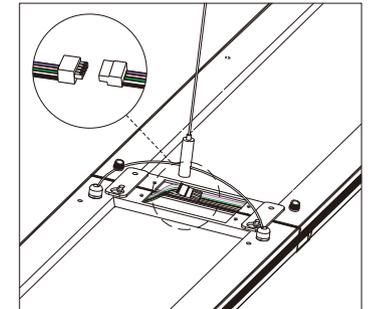

② Remove the existing covers, then connect the quick connectors properly.

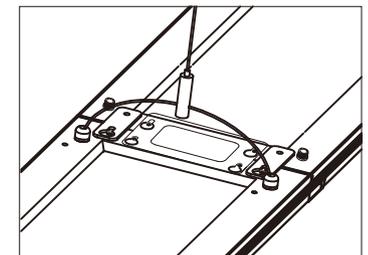

③ Mount the joint cover by screw.

► **8' UP/DOWN LUMINAIRE**

